

WRONG TRY PENALTY

- Entry of four (4) consecutive invalid codes starts a 5-minute delay period.
 - LED flashes red at ten (10) second intervals.
- At the end of the delay period, two more consecutive invalid codes will restart an additional 5-minute delay period.

CHANGING YOUR CODE

ALWAYS PERFORM THIS OPERATION WITH THE DOOR OPEN

- ① Enter "zero" six times.
 - ② Enter your existing six (6) digit code one time.
 - ③ Enter your NEW six (6) digit code two times.
 - ④ If a mistake is made wait thirty (30) seconds and repeat steps ① - ③.
 - ⑤ Test lock operation several times before closing door.
- **Valid Code Entry** - Double signal after valid six (6) digit code is entered.
 - **Invalid Code Entry** - Triple signal and old code is still valid.

BATTERY LOW WARNING

- Repeated beeping during an opening indicates that the battery is low and needs immediate replacement.
- Uses one (1) 9-Volt Alkaline Battery. LA GARD recommends the use of Duracell™ or Eveready™ Alkaline batteries. LA GARD recommends the replacement of batteries at least once annually.
- **If battery is depleted and will not allow lock to open, simply follow instructions below. Lock contains a non-volatile memory, even with batteries removed the lock will retain all programming.**


WARNING: The port for the eKEY^{II} is a data port only. Connecting power to this port will damage the system.

CHANGING YOUR BATTERY

- ① Remove black plastic battery compartment cover (located at the bottom of the keypad) by gently pulling downward on its handle.
- ② Allow the battery and its attached leads to drop down and out of the battery compartment. If it does not drop, gently pull on the battery until it drops out.
- ③ The connector is easily removed by unsnapping it from the two terminals on the top of the battery.

Never Pull on the Battery Leads


- ④ Connect a new 9-Volt Alkaline battery to the battery clip.
- ⑤ Gently push the battery and the leads completely up into the battery compartment.
- ⑥ Install the battery cover by placing one side of the cover in position first and then gently pressing the other side into place.

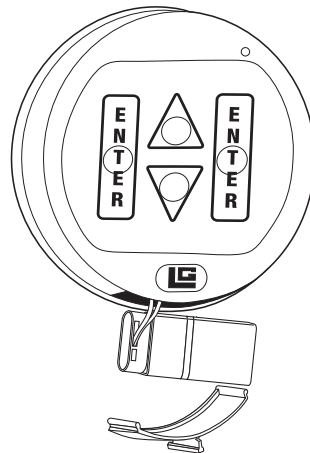

PRIVAT^{II}

3190 Electronic Entry Device

USER OPERATING INSTRUCTIONS

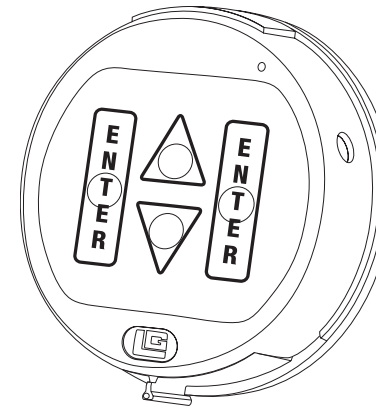

FEATURES

Please see Manager Instructions for additional features that may be activated on your unit.

USER CODE

- Open Lock
- Change Code

WRONG TRY PENALTY

- Four (4) consecutive invalid codes initiates five minute delay period.

LOW BATTERY WARNING

- Repeated audio and visual signal (LED flashing and repeated beeping) during opening indicates battery low.

AUDIO AND VISUAL SIGNAL

- Double signal (LED flashes and unit beeps) indicates entry is valid or accepted.
- Triple signal indicates invalid or not accepted.

Using the PRIVAT^{II} entry does not change the way the lock features operate. The only difference, from a standard keypad, is in the way the digits are entered.

OPENING THE LOCK

To enter a combination using the PRIVAT^{II} entry, first press either the up or down arrow key to wake up the lock. The LCD will display a random number.

- ① Press the up arrow key to scroll forward numerically or the down arrow key to scroll backwards numerically until the LCD displays the first digit of the desired code.
- ② Press either of the enter keys to select this number at which time a beep will be heard indicating this number has been entered. After this number is entered the LCD will display another random number.
- ③ Again use the arrow keys to scroll to the next digit of your code and enter the number using the enter key.
- ④ Continue this procedure until all of the numbers of your code have been entered.
- ⑤ The lock will signal a valid code entry with a double signal.
- ⑥ Within four (4) seconds, either turn keypad to the open position (Clock-wise) if using a deadbolt style lock or turn the handle to the open position, if using a swingbolt style lock.
- ⑦ Pull door open.

- **Invalid Code Entry** - Lock will signal three (3) times.