

# AUDITLOK xI ALARM CONNECTIONS

## OPERATION

THE AUDITLOK XL MONITORS SENSORS WITHIN THE LOCK AND ON THE DOOR TO DETERMINE IT POSITION. IF THE DOOR IS DETECTED OPENED BY MEANS OTHER THAN THE ELECTRONICS A SIGNAL IS SENT AND THE BURGLAR ALARM RELAY CHANGES STATE AND WILL REMAIN THAT WAY UNTIL A USER LOGS IN WITH A KEY AND PIN NUMBER

IF A DURESS PIN IS ENTERED, THE DURESS RELAY CHANGES STATE AND WILL REMAIN THAT WAY UNTIL A USER LOGS IN WITH A KEY AND THEIR NORMAL PIN.

## INSTALLATION

COMPLETE THE ALARM LOOP BY CHOOSING EITHER THE NORMALLY OPEN OR NORMALLY CLOSED CONTACT WITH THE COMMON. AN END OF LINE RESISTOR MAY BE ADDED BETWEEN EITHER CONTACT AND THE COMMON

- BURG ALARM COMMON (BLUE)
- BURG ALARM NORM OPEN (YELLOW)
- BURG ALARM NORM CLOSED (GREEN)
- DURESS ALARM NORM CLOSED (RED)
- DURESS ALARM NORM OPEN (BLACK)
- DURESS ALARM COMMON (WHITE)

## TESTING

TO TEST THE DURESS ALARM HAVE ANY USER ENTER THEIR DURESS PIN (NORMAL PIN +1) AND THE DURESS RELAY WILL CHANGE STATE

TO TEST THE BURGLAR ALARM, HAVE ANY USER OPEN THE DOOR. THROW THE BOLTWORK BY PRESSING THE DETENT. THEN PRESS THE INNER DOOR CLOSER ON THE INSIDE OF THE OUTER DOOR. THE AUDITLOK WILL DISPLAY A VIOLATION AND THE RELAY WILL CHANGE STATE.

CLEAR THE ALARMS BY HAVING A USER LOG IN WITH THEIR CORRECT PIN

