



## AUDITLok XLV

# WARNINGS

**Power Source:** Connect the power supply's inlet plug into a dedicated 115 Vac 15A outlet or NKL authorized power conditioner. Unstable power will cause problems with operation.

**Power Loss:** If power is lost to a safe while a user is making a drop, the system will not correctly count the drop. Never remove power to a bill validator, bill validating safe or any other component in the NKL system while a drop is in progress. Doing so will result in incorrect financial totals appearing on certain reports.

**Data Cables:** Never disconnect the data cable at any point between units while a drop or any other operation is in progress, including Insta-Drop and Extended Drop operation. Doing so will result in incorrect financial totals appearing on certain reports.

**Warranty Impact:** Problems resulting from failure to follow above warnings are not covered by the NKL factory warranty.



a member of the FireKing® Security Group