

NKL VALIDATOR REPLACEMENT AND CLEANING INSTRUCTIONS



JCM "BNF" Bulk Feed Validator Head Assembly

Head Removal

Pull out on the lever handle under the head to release the head assembly. Pull gently. The head will slide out. Support it underneath with both hand when sliding it out. Set it on a clean dry surface to clean or remove bill jams.

Cleaning and Clearing Bill Jams

For "normal cleaning" use the JCM Waffle Cleaning Card (part 801278). Insert the card and allow it to be rejected. Repeat 3 times in a row. Do this once per month.

To "deep clean" dirt build-up open the front and rear head sections and use a stiff nylon or horse hair brush to remove debris from rollers and belts. Use a dry or damp cloth to remove excess debris. Perform a normal cleaning using the JCM Waffle Cleaning Card after deep cleaning. Do this once every 3 months.

To clear a bill jam open each section and clear obstructions as needed. Clean as needed.

To open the nose section press in on the two white nose release buttons and pull up.

To open the front section use your thumb and middle finger to press forward on the release clamps and pull up with your index finger.

To open the back section lift the release lever. Pull up to expose the back of the bill path.

Head Replacement

Carefully reverse the process of head removal by inserting the head slowly with steady pressure until the connectors mate and the release clamp clicks into place. The stacking mechanism will cycle when the head is fully inserted. Inserting the head too quickly or forcing it can cause the connector on the validator to break the connector at the rear of the head housing in the safe.




Pull handle under nose to release head assembly



Slide out using both hands for support




Squeeze nose release buttons, lift

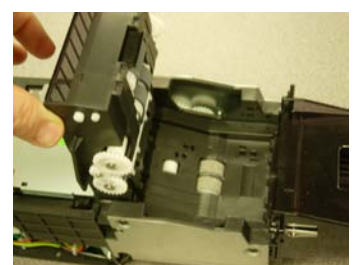


Open nose section bill path



Push clamps forward, lift

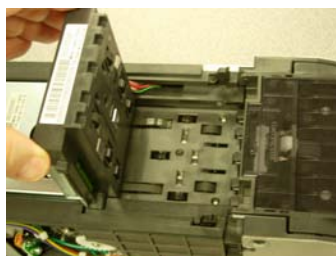

Open front bill path

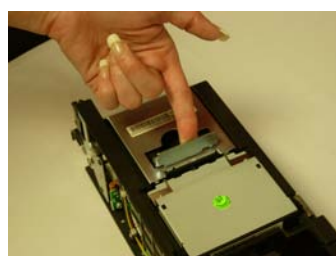


Pull release lever, lift



Open rear bill path

NKL VALIDATOR INTRUCCIONES PARA CAMBIAR Y LIMPIAR EL VALIDADOR

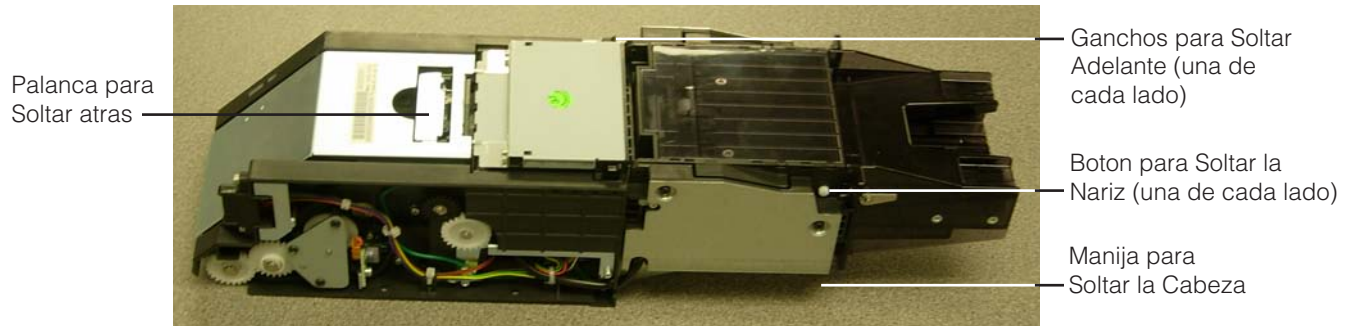

JCM 'BNF' Montaje de la Cabeza del Aceptador de Billetes

Remover la Cabeza

Hallar la palanca que esta debajo de la cabeza para soltar el montaje de la cabeza. Halle cuidadosamente. La cabeza se deslizará hacia fuera. Sostengala por debajo con las dos manos. Pongala en un lugar limpio y seco para limpiarla o para remover los billetes atorados.

Limpiar y Remover los Billetes Atorados

Para una "limpieza normal" use la Tarjeta de Limpieza Waffle de JCM (parte 801278). Ponga la tarjeta en el lugar de los billetes y permita que sea rechazada. Repita esto 3 veces una tras otra. Hagalo una vez al mes.

Para una "limpieza profunda" de la suciedad acumulada abra la seccion de adelante y de atras de la cabeza y use nylon duro o un cepillo duro para remover lo sucio que se acumula en los rodillos y cinturones. Despues haga una limpieza normal con la tarjeta de limpieza "Waffle" de JCM despues de una limpieza profunda. Hago esto una vez cada 3 meses.

Para remover un billete atorado abra cada seccion y cuando necesite retire los pedazos atorados. Limpie si es necesario.

Para abrir la seccion de la nariz presione hacia adentro los dos botones de liberacion blancos y hallela.

Para abrir la seccion de adelante use el dedo pulgar y el medio para presionar hacia adelante los ganchos de liberacion y Halle hacia arriba usando el dedo indice.

Para abrir la seccion de atras levante la palanca. Halle hacia arriba para ver la parte de atras la ruta del billete.

Cambio de la Cabeza

Cuidadosamente reverse el proceso de remover la cabeza insertando lentamente la cabeza con presion constante hasta que las conectores se encuentren y los ganchos se ajusten asegurandolo en su lugar. Cuando la cabeza esta completamente insertada el mecanismo hara un ciclo. Insertar la cabeza muy rapido o forzada puede causar ruptura de los conectores en la parte trasera del receptor de la cabeza dentro de la caja fuerte.




Halle la palanca bajo la nariz para liberar la cabeza



Deslicelo hacia afuera usando las dos manos para sostenerlo



Aprete los botones de liberacion, Halle

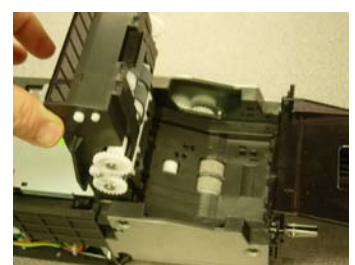

Abra la seccion de la nariz del camino del billete



Aprete las ganchos hacia adelante y levante



Abra el camino de billetes delantero



Halle la palanca de liberar, levante



Abra la parte de atras del camino del billete